

Special Features:

Extendible Stock

To extend the stock push the extendable stock button and pull the stock out (Fig. 12).

Proper Care

CAUTION: Make sure "SAFETY" is on before you attempt to clean the gun.

Make sure the gun is empty of all ammunition. To operate properly, your airsoft gun requires routine maintenance. Simple oiling and cleaning are sufficient. Lack of maintenance may cause poor performance.

- Cleaning: Use a clean cloth to wipe off any access dirt that may build up. Use a cotton swab to remove grit and excess oil.
- Storage: Practice safety. Ammunition should be stored separately from the gun to keep them from untrained shooters. If equipped, magazine should be removed from gun and unloaded.

Make sure to clean, dry and empty your gun before storing in a safe place.

CAUTION: The components of this airsoft gun were engineered to deliver optimum performance. Any modification or tampering to the gun may cause a malfunction and make it unsafe to use. Any change in performance, such as a lowered trigger pull force and/or shortened trigger travel, indicates possible modification, tampering and/or wear. If this situation occurs, the gun should be inspected, replaced or properly repaired by qualified personnel. Any gun that has been dropped should be checked by qualified personnel to ensure that its function has not been affected.



Shooter Safety Rules

Airsoft guns are so realistic and can be mistaken for real firearms (even with the blaze orange muzzle). Do not carry them in public areas where a police officer or any other person could think they are real firearms. Never remove or paint the blaze orange safety tip required by Federal Law. These guns shoot 6mm plastic BB's at high speed. Airsoft guns can be dangerous if not used properly and could cause injury or even death.

In order to avoid an accident, the shooter should follow all of the following safety rules:

- Never use airsoft guns or stand in an area where guns are being used without wearing special protective glasses or face mask in order to protect your eyes.
- Never point **any** gun at a person, animal or anything else you do not want to shoot.
- Never load or point the gun until you are ready to shoot safely at the target you have selected.
- Always cock gun in a safe direction and put your finger on the trigger **only** when you are ready to fire.
- Never shoot at targets from a close range. BB's could rebound back toward the shooter or others.
- Never shoot at a hard surface or anything (including water) that could cause a skip, bounce back or ricochet.
- Never let a minor or child play with **any** gun.
- Never try to modify any part of the gun or accessories.
- Never load this gun with anything other than genuine 6mm premium plastic BB's.
- Always be careful, responsible and act safely with your airsoft gun.

Remember: Safety First!

TIPPMANN™

Tippmann Sports, LLC. warrants that this product is found free from defects in materials and workmanship for a period of 30 days from the original date of purchase by the initial owner/purchaser. This warranty does not apply to defects discovered after purchase which were caused by the unauthorized modifications and alterations of our product. This warranty will be voided if damage occurs due to improper operation of your gun, dropping the gun or magazine, usage in extreme temperatures, attempting to dismantle or modify it, use of inferior quality BB's or foreign objects, failure to carry out routine maintenance, removing or painting the orange safety tip required by Federal Law or any other cosmetic modifications. Tippmann Sports, LLC. will replace, without charge, any of its Airsoft guns that have failed through defect in material or workmanship. Tippmann is dedicated to providing you with the ultimate Airsoft products and the quality support necessary for satisfactory play.

WARRANTY AND REPAIR PROCEDURE

If you should encounter any problems with your Airsoft gun, please use the following steps to initiate the warranty or non-warranty repair process:

1. Ship or deliver your product(s) to: Tippmann Sports, LLC. 2955 Adams Center Road Fort Wayne, IN 46803
2. Postage and delivery charges must be prepaid.
3. Include a brief statement regarding the requested repair work. Within 24 hours Tippmann Sports, LLC will return it to you via regular ground UPS. If you wish to have it returned using a faster service, you can request for NEXT DAY AIR UPS OR SECOND DAY AIR UPS. You will be charged for this service and must include your credit card number with the expiration date. Your card will be charged the difference in additional cost over regular ground shipping service.
4. If returning within the 30 day warranty period from date of purchase, return the Airsoft gun in the original package with a copy of the original sales receipt. Be sure to include your full name, address and phone number.
5. If your Airsoft gun needs repair after the 30 day warranty period please contact Tippmann Sports at 800-533-4831 and we will advise you how to return your gun for repair. If the gun is repairable you will be given a return authorization number and an estimated cost of the repair plus the cost of return shipping.

WARRANTY REGISTRATION

Register your Airsoft gun either:

1. Online at www.Tippmann.com
2. Complete the information on included registration card and mail to address below.

Tippmann Sports, LLC.

2955 Adams Center Road Ft. Wayne IN 46803

www.tippmann.com

Tel: 260-749-6022 800-533-4831 Fax: 260-441-8504

Made in China

TIPPMANN™ OPERATION MANUAL

XT-800

ELECTRIC MACHINE GUN



- Fully Extendable Stock
- Rechargeable Battery
- BB Speed Loader
- 100 BB's

(Not Intended For Paintball Use)

PRODUCT ADVISORY: This product may be mistaken for a firearm by law enforcement officers or others. Altering the coloration or markings (including the blaze orange barrel tip) required by state and/or Federal Law or regulation, to make this product look more like a firearm, is dangerous and may be a crime. Brandishing or displaying this product in public may cause confusion and may be a crime. Local laws and ordinances may vary, check and follow all regulations.

WARNING: This is not a toy. Misuse may cause serious injury or death. Must be 18 years or older to purchase. Persons under 18 years old must have strict adult supervision during use. Read operation manual and safety tips before using. The buyer and user must obey all laws and restrictions regarding use and ownership of this product. Safety glasses should be worn at all times. This gun shoots plastic BB's through the force of air pressure.

DISCLAIMER: This product is an imitation firearm and is not intended nor represented to be comparable in design, appearance or function to any actual firearm offered by other manufacturers. All product names are trademarks of Tippmann Sports, LLC. which has no affiliation to and is not associated or sponsored by any manufacturer of actual or imitation firearms.

For model numbers: XT-800

Note: Hold hand under the magazine when pressing the Magazine Release Button to avoid dropping the magazine.

! WARNING: This gun can cause the loss of an eye, other serious injury or death. Read, understand and follow all the safety and operation instructions carefully. Do not load ammunition into the magazine until you have read and understand instructions and are ready to shoot. If you do load ammunition and decide not to shoot, remove it either manually or by shooting it at a safe target. An unloaded gun is the safest. Accidents happen fast. The loss of an eye or any other injury is a very serious thing. Shoot safely and remember **“Safety First.”**

! This safety alert symbol indicates important safety messages in this manual. When you see this symbol be aware of the possibility of injury and carefully read the message that follows.

Although your new airsoft gun is not a firearm, it is a gun and should be treated with the same caution and respect as any conventional firearm. Always remember, the first and most important safety feature of any gun is the shooter. There is a **“SAFETY”** on the gun which locks the trigger. The safety is a mechanical device and the shooter is the only part of the system that can make a gun safe or unsafe. **Do not depend on a mechanical safety.** Think ahead and avoid situations that might lead to accidents. Guns differ in their operations. You are never ready to fire any gun until you are thoroughly familiar with it. Read the following operating instructions and, **without loading ammunition**, proceed through the operating steps, dry firing your gun several times at a safe target. This will allow you to learn how to operate the gun properly and safely.

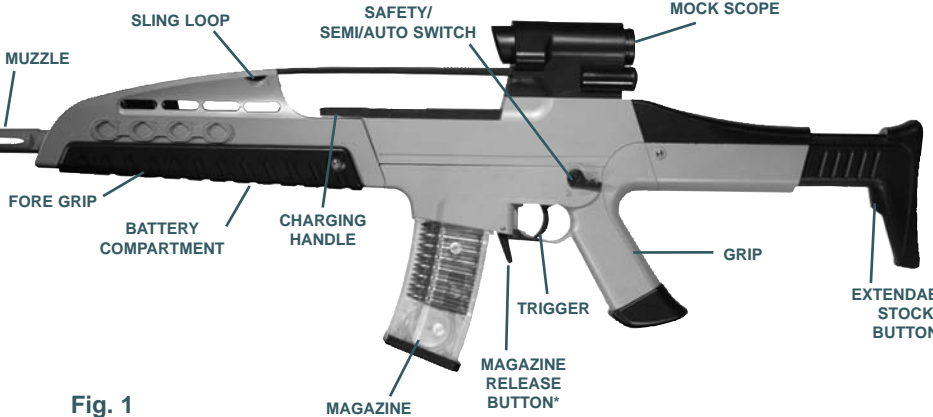 


Fig. 1

* Please note: Hold hand underneath magazine when pressing the magazine release button to avoid dropping the magazine

Operation Instructions

! WARNING: Always point the gun in a safe direction. Never point the gun at or near anyone. Always treat the gun as if it were loaded and ready to fire.

Step 1: Charging the Battery

Plug the white end of the battery to the white end of the charger (matching the square pin to the square pin and the circle pin to circle pin), plug the charger in a power outlet and let the battery charge for 5 hours.

Step 2: Put the "Safety On"

(Fig. 2a) Put the "Safety On" the gun by turning the lever to the "Safe" position.

Step 3: Loading the Battery

a. (Fig. 3) Open the battery compartment by removing rubber cover on the bottom of the fore grip **b.** (Fig. 4) Take the battery and match up the white end from the battery to the white end of the plug located inside the battery compartment (matching the square pin to the square pin and the circle pin to the circle pin.) The battery will fit snug in the compartment. **c.** After the battery is in place, insert the rubber cover back on the battery compartment.

Step 4: Filling the Magazine with Ammunition

a. (Fig. 5) Grab the magazine with your left hand and pull the magazine release button with your thumb towards the magazine. At the same time pull the magazine downward until it is removed from the gun. **b.** After the magazine is removed, open the BB feeding port on the speed loader (Fig. 6), located on the top of the speed loader and pour BB's in until it is full. Close the BB feeding port. **c.** Align the bottom of the speed loader to the loading port of the magazine. (Fig. 7) Continually push and release the lever on the speed loader until the magazine is full. **d.** (Fig. 8) Insert the magazine back into the gun: push up until you hear a "click". After you hear the click your gun is loaded and should be handled with additional care.



Fig. 2a



Fig. 2b



Fig. 2c



Fig. 3



Fig. 4



Fig. 5



Fig. 6



Fig. 7



Fig. 8

Step 5: Firing the Gun

Verify that your gun has "Safety On" (Fig. 2a). With the gun pointed in a safe direction, take "Safety Off" by turning the lever to the "Semi" (Fig. 2b) or "Auto" position (Fig. 2c).

- Setting the switch to semi (semiautomatic) will fire one BB for each trigger pull.
- Setting the switch to auto will fire BB's automatically as long as the trigger is held. Squeeze the trigger when you are ready to fire.

! WARNING: Use extreme caution in operating as the gun is now ready to fire – squeezing the trigger will fire the gun.

! WARNING: As with all guns, if ammunition does not fire after completing the operation steps, **do not assume that the gun is unloaded.** Keep the gun pointed in a safe direction.

Step 1: Remove the magazine (Fig 5).

Step 2: Fire the gun in safe direction, treating the gun as if it is still loaded.

If ammunition still does not fire, do the following:

Step 1: Put "Safety On" by turning the lever to the "Safe" position. Remove the magazine.

Step 2: Clear the barrel by running a cleaning rod through from the muzzle end. NEVER point the muzzle toward yourself or anyone else. Be careful not to damage the bolt tip by pushing the rod too hard.

Step 3: Point in safe direction, take "Safety Off", and then test fire.

Step 4: Repeat operation steps.

Emptying Ammunition from Magazine

Fire remaining BB's in BB chamber in a safe direction. Remove the magazine from the gun. To remove the BB's from the magazine hold the magazine into your hand and pull the spring pin located at the top of the magazine. The BB's will come out of the gun fast, be sure to have it pointed into your hand and not toward your face.

Ammunition

! Caution: Use only 6mm premium grade .12 or .20 gram plastic BB's with this airsoft gun.

Do not load lead pellets, steel BB's, copper BB's, buckshot, ball bearings, paintballs or any other foreign objects as ammunition because they will damage or jam your airsoft gun and could cause harm to either the shooter or others.

Adjustable Hop Up

The adjustable hop up enables you to put a back spin on the BB to increase range. To adjust the hop up use your left hand and pull back the charging handle, this will open the bolt. (Fig. 10) You will see the hop wheel inside the bolt, adjust it with your right hand. Turning the wheel up toward the top of the gun will increase the hop up and turning the wheel down toward the magazine will decrease the hop up. Be careful – if you put too much hop up on the BB, the BB will hook upwards. (Fig. 11)

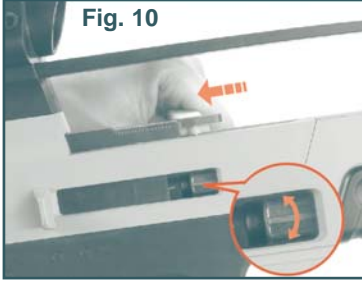 


Fig. 10

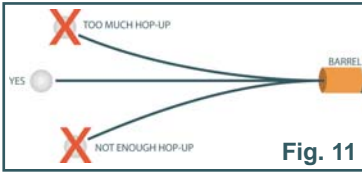 


Fig. 11