

## Step 5: To Fire the Pistol Again

**I WARNING:** Next BB is ready to fire. Squeezing the trigger will fire your pistol. Put “**Safety On**” if not ready to fire.

Squeeze trigger to fire the next BB. After the last BB is fired, refill with BB's (see Step 3).

**Note:** Replace CO2 cartridge only when BB velocity is significantly reduced.

**I WARNING: IF THE BB DOES NOT FIRE:** Do not assume that the pistol is unloaded. The ammunition may be jammed in the barrel or magazine, the CO2 cartridge may be empty, or Feeding Pin Lock might not have been released (see Step 3.1).

If BB is jammed in the barrel, point pistol in a safe direction and:

- Remove magazine from the pistol.
- Grasp the Cocking Slide (Fig. 1) and pull back toward rear.  
**Note:** Grasp the slide firmly as you cock it to prevent it from slipping and snapping shut, possibly causing injury. While holding the slide toward the rear, push Cocking Slide Lock Lever up with thumb to lock Cocking Slide open (Fig. 2).
- Clear the barrel by running a cleaning rod through the muzzle end. Do not point the muzzle toward yourself or anyone else. Be careful not to damage the bolt tip by pushing the rod too hard.
- Lower Cocking Slide Lock Lever, Cocking Slide will snap into forward position. Point in safe direction, dry fire to lower hammer.
- Repeat operation Steps 1-4.

## To Empty Ammunition from Magazine

Put “**Safety On**”, release CO2 pressure and remove CO2 cartridge (Step 2b). Pull the Spring Loaded Feeding Pin to the bottom of the magazine until it locks (Step 3.1) and empty BB's from the Loading Port. Release the Spring Loaded Feeding Pin.

## Proper Care

**I WARNING:** Put “**Safety On**” and ensure the pistol is empty of all ammo before you attempt to clean the pistol. To operate properly, your pistol requires simple regular maintenance. Lack of maintenance may cause poor performance.

**Oiling:** To maintain top shooting performance, add a few drops of silicone oil on all moving parts including slide and magazine. Do not over oil.

**Cleaning:** Wipe off any excess dirt that may build up with a clean cloth. Use a cotton swab to clean grit and excess oil inside the open breech.

## Storage

Practice safety. Ammunition should be stored separately from the pistol to keep it from untrained shooters. Magazine should be removed from pistol and emptied of CO2 cartridge and BB's (see Step 2b and above). Make sure to clean, dry, empty and uncock your pistol before storing in a safe place out of reach of unauthorized users.

**I WARNING:** The components of this pistol were engineered to deliver optimum performance. Any modification or tampering with pistol or magazine may cause a malfunction and may make it unsafe to use. Any change in performance (such as a lowered trigger pull force and shortened trigger travel) indicates possible modification, tampering and/or wear. Any such pistol should be inspected, replaced or properly repaired by qualified personnel. Any pistol that has been dropped should be checked by qualified personnel to ensure that its function has not been affected.

# TIPPMANN™

## Shooter Safety Rules

Pistols are so realistic they can be mistaken for real firearms (even with the blaze orange safety tip). Do not carry them in public areas where a police officer or any other person could think they are real firearms. Never remove or paint the blaze orange safety tip required by Federal Law. Some pistols shoot with a muzzle speed of up to 350 feet per second and a range of up to 200 feet. Use only premium 6mm plastic BB's. Pistols can be dangerous if not used properly and could cause injury or even death.

In order to avoid any accident, the shooter should follow all of these safety rules:

- Never use airsoft pistols or stand in an area where guns are being used without wearing special protective glasses or face mask in order to protect your eyes.
- Never point a pistol at a person, animal or anything else you should not shoot.
- Never load or point the pistol until you are ready to shoot safely at the target you have selected. Always cock pistol in a safe direction and put your finger on the trigger only when you are ready to fire.
- Never shoot at targets from a close range. BB's could rebound back toward the shooter or others.
- Never shoot at a hard surface, water or anything that could cause a bounce back or ricochet.
- Never let a child play with your pistol without strict adult supervision.
- Never try to modify any part of the pistol or accessories. Never shoot anything other than genuine 6mm Premium BB's.
- Always be careful and act safely with your airsoft pistol.
- Remember Safety First!

Tippmann Sports, LLC. warrants that this product is found free from defects in materials and workmanship for a period of 30 days from the original date of purchase by the initial owner/purchaser. This warranty does not apply to defects discovered after purchase which were caused by the unauthorized modifications and alterations of our product. This warranty will be voided if damage occurs due to improper operation of your gun, dropping the gun or magazine, usage in extreme temperatures, attempting to dismantle or modify it, use of inferior quality BB's or foreign objects, failure to carry out routine maintenance, removing or painting the orange safety tip required by Federal Law or any other cosmetic modifications. Tippmann Sports, LLC. will replace, without charge, any of its Airsoft guns that have failed through defect in material or workmanship. Tippmann Sports, LLC. is dedicated to providing you with the ultimate Airsoft products and the quality support necessary for satisfactory play.

Tippmann Sports, LLC.  
2955 Adams Center Road  
Ft. Wayne, IN 46803  
www.tippmann.com

Tel: 260-749-6022 800-533-4831 Fax: 260-441-8504

Made in Taiwan

# TIPPMANN™ OPERATION MANUAL

## T-400 PISTOL

6mm High Powered All-In-1™ CO2 Non-Blowback Pistol



6mm High Powered All-In-One  
CO2 Non-Blowback Pistols

**I PRODUCT ADVISORY:** This product may be mistaken for a firearm by law enforcement officers or others. Altering the coloration or markings (including the blaze orange barrel tip) required by state and/or Federal Law or regulation, to make this product look more like a firearm, is dangerous and may be a crime. Brandishing or displaying this product in public may cause confusion and may be a crime. Local laws and ordinances may vary, check and follow all regulations.

**I WARNING:** This is not a toy. Misuse may cause serious injury or death. Must be 18 years or older to purchase. Persons under 18 years old must have strict adult supervision during use. Read operation manual and safety tips before using. The buyer and user must obey all laws and restrictions regarding use and ownership of this product. Safety glasses should be worn at all times. This gun shoots plastic BB's through the force of air pressure.

**DISCLAIMER:** This product is an imitation firearm and is not intended nor represented to be comparable in design, appearance or function to any actual firearm offered by other manufacturers. All product names are trademarks of Tippmann Sports, LLC, which has no affiliation to and is not associated or sponsored by any manufacturer of actual or imitation firearms.

For model number: T-400

**Note:** Hold hand under the magazine when pressing the Magazine Release Button to avoid dropping the magazine.

## READ OPERATION MANUAL BEFORE USE

This safety warning symbol indicates important safety messages in this manual. When you see this symbol be alert to the possibility of injury and carefully read the message that follows.

**WARNING:** This pistol can cause the loss of an eye, other serious injury or death. Always wear eye protection when shooting or handling your airsoft pistol. Read, understand and follow all the safety and operation instructions carefully. Do not load ammunition into the magazine until you read and understand the instructions and are ready to shoot. If you do load ammunition and decide not to shoot, remove it either manually or by shooting it at a safe target. An uncocked, unloaded pistol is the safest. Accidents happen fast. The loss of an eye or any other injury is a very serious thing. Shoot safely and remember "Safety First."

Although your new airsoft pistol is not an actual firearm, it is a gun and should be treated with the same caution and respect as any conventional firearm. Always remember, the first and most important safety feature of any gun is the shooter. The safety is a mechanical device and the shooter is the only part of the system that can make a gun safe or unsafe. Do not depend on a mechanical safety. Think ahead and avoid situations that might lead to accidents. Guns differ in their operations. You are never ready to fire any gun until you are thoroughly familiar with it. Read the following operation instructions and without loading ammunition, proceed through the operating steps. This will allow you to learn how to operate the gun properly and safely.



Fig. 1

Fig. 2

\* Please note: Hold hand underneath magazine when pressing the magazine release button to avoid dropping the magazine.

## CO2 Cartridge Use

Use only small neck 12 gram size CO2 cartridges in your pistol.

**WARNING:** CO2 cartridge contents are under pressure. Do not mutilate or incinerate, or expose to heat or temperatures above 120° F as cartridge may explode. Do not inhale gas fumes or spray liquid CO2 gas.

**WARNING:** After installing a new CO2 cartridge, increased pressure may substantially increase muzzle velocity of the first several BB's fired. Caution should be observed regarding higher impact and increased ricochet potential.

**Note:** The temperature of the CO2 cartridge will cool during shooting causing the gas pressure to reduce, this will limit the velocity of the BB. This is a normal condition. Let stand or warm with hand until pressure increases. If pressure does not return, a new CO2 cartridge is needed. Never fire pistol while it is upside down as the gas is unable to expand and can cause damage to parts. After continual firing, if BB velocity is significantly reduced, a new CO2 cartridge may be needed. See below for loading and removing procedures.

## Operation Instructions

**WARNING:** Always point pistol in a safe direction. Never point the pistol at or near anyone. Always assume and treat the pistol as if it is loaded and ready to fire.

### Step 1: Put "Safety On"

Push the safety lever forward to the "S" position to engage the safety (white dot shows) (Fig. 3).

**Note:** The safety is not automatic. It will only do its job when you do yours. Remember, the best safety is good pistol handling.

**Note:** Always wear eye protection when shooting or handling your airsoft pistol.

### Step 2a: Load Magazine with CO2

**WARNING:** Review "Cartridge Use" above before loading CO2 cartridge.

**2a.1:** Remove the magazine from the pistol. Hold your hand under the magazine and push the Magazine Release Button (Fig. 2). Pull magazine out if it does not drop.

**2a.2:** Unscrew CO2 Lock Screw counterclockwise (Fig. 5) on the bottom of the magazine until it stops to allow room to insert CO2 cartridge into magazine. Insert CO2 cartridge into the magazine with the narrow end of the cartridge pointing towards the top of the magazine (Fig. 5).

**2a.3:** Tighten the CO2 Lock Screw on the bottom of the magazine, turning clockwise, and hand tighten until touching CO2 cartridge. Insert magazine back into the pistol grip of your gun and push up until you hear a click. Then quickly tighten the CO2 Lock Screw until you hear the CO2 cartridge puncture with a hiss. Continue to tighten quickly until hand snug.

**Note:** Do not use any tool to tighten CO2 Lock Screw, over-tightening may cause damage to magazine.

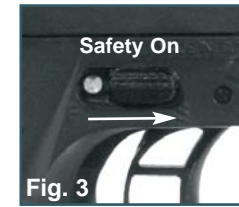


Fig. 5

Fig. 6

Fig. 7

## Step 2b: To Release CO2 from Magazine and Remove CO2 Cartridge

**WARNING:** Keep hands and face away from escaping CO2 gas as frostbite can occur if CO2 comes in contact with skin.

**Note:** Release CO2 before removing magazine from gun. Take "Safety Off", hold the pistol upright by the Grip. Point pistol in a safe direction, squeeze and hold the Trigger. Push Hammer (Fig. 1) up and in to release the gas.

**Note:** BB's in the magazine will fire when squeezing the Trigger. Make sure the magazine is empty of BB's before you release the CO2.

If cartridge makes a hissing sound, hold Trigger and Hammer until CO2 completely escapes. When CO2 gas is completely released, hold your hand under the magazine and push the Magazine Release Button (Fig. 2) to remove magazine from the pistol. Turn CO2 Lock Screw counterclockwise until it stops, then turn magazine over to remove cartridge.

**Note:** CO2 cartridge may become very cold when CO2 is released.

## Step 3: Load Magazine with BB's

**WARNING:** Use only premium .20 gram or heavier 6mm plastic BB's with your CO2 pistol. Do not use paintballs, lead pellets, steel BB's, copper BB's, buckshot, ball bearings or any other foreign objects as they will damage or jam your pistol and/or cause personal injury. Do not reuse BB's.

**3.1:** Remove magazine from gun. Slide the Spring Loaded Feeding Pin, located at the top of the magazine (Fig. 6), down to the bottom of the magazine and engage the Feeding Pin Lock. Load .20 gram or heavier 6mm plastic BB's into Loading Port at the top of the magazine. Shake magazine slightly while loading BB's to load in a zigzag pattern (Fig. 7) to achieve magazine maximum capacity of 17 BB's. After loading the magazine with BB's, slowly slide the Spring Loaded Feeding Pin from the locked down position.

**WARNING:** Do not point the Loading Port of the magazine toward your face as BB's could fly out and hit you in the eye while loading if the Spring Loaded Feeding Pin is released quickly.

**3.2:** Insert magazine back into the pistol grip of your gun and push up until you hear a click.

## Step 4: Firing Pistol

**WARNING:** Never use airsoft pistols or stand in an area where guns are being used without wearing special protective glasses or face mask in order to protect your eyes.

When ready to fire, point the pistol in a safe direction and take "Safety Off" by sliding the safety lever back to the "F" position (red dot shows) (Fig. 4).

**WARNING:** Use extreme caution as the pistol is now ready to fire.

**Note:** Cocking pistol may damage your pistol. DO NOT COCK PISTOL, BB's are automatically in firing position.

Squeezing trigger will fire pistol and the hammer will move forward when fired.